



# **DIGITAL STILL CAMERA USER'S MANUAL**

English

# ENGLISH

## Basic Reference

Thanks for your selection of this camera.  
Please read the instruction carefully before using. And  
do as the followings to avoid the damages caused by  
improper operations to the camera.

## CONTENTS

---

Safety Precautions.....	E-2
Quick Reference.....	E-3
General Information.....	E-6
Trouble Shooting.....	E-16

### **Safety Precautions**

- Should you ever notice smoke (or a strange smell coming out of the camera), burn your finger, sound strange or any other abnormal status, immediately remove the camera's battery.
- You should be responsible for the damage to the camera or materials caused by your improper operation to the Digital Camera.
- Do not attempt to modify this Digital Camera.
- Do not open the battery cover while turn on the camera.
- Do not expose the Digital camera to moisture and make sure no water get into the camera.
- Turn off the power and remove the battery once water get into the camera.
- Do not operate the Digital Camera when you are driving.
- Do not cover or swap the Digital Camera with a cloth. It should be placed in well-ventilated locations.
- Do not make the camera stricken with hard.
- If the Digital Camera will not be used for a long time, you would better to remove the battery.

**Function Characteristic**

- 5.1Mega Pixels CMOSsensor, and up to maximun of 12 MegaPixels by interpolated
- 3.0 inch LTPS LCD Display
- 8×Digital Zoom
- 32MB flash memory, and supports up to 4GBSDHC , SD or MMCcard
- 10sec Self-timer、20sec Self-timer
- DPS
- PC-Camera



### Package Contents

 
 
 
 
Check to make sure that all of the items shown on the below are included with your package.

- ◆ Camera
- ◆ USB/TV cable
- ◆ Pouch
- ◆ Alkaline/2xAA rechargeable battery
- ◆ Strap
- ◆ CD-ROM
- ◆ User manual

### Getting to know your Digital Video Camera



## Getting to know your Digital Video Camera

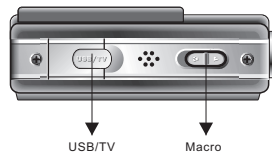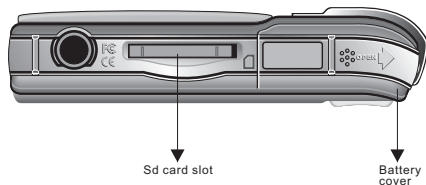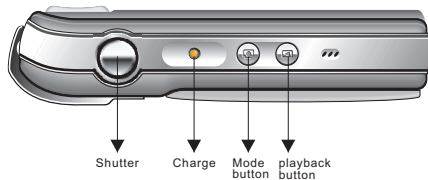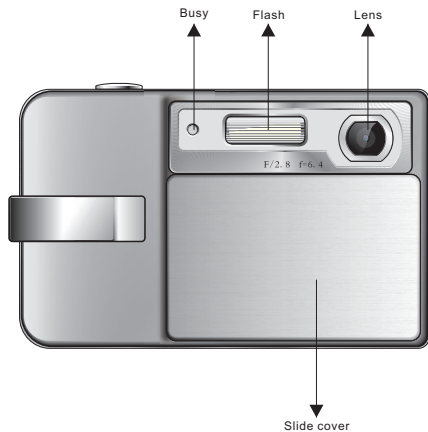



 

 
### Loading the battery into the camera

1. Slide the battery cover and then swing it open.
2. Align the **[+]** mark on the battery with **[+]** mark on the camera and slide the battery into the camera.
3. Close the battery cover.

### Using Memory Card

1. The Camera has 32MB built-in memory for recording.
2. The camera supports up to 4GB SDHC, SD or MMC card.

#### **Note:**

 
-  When there is a memory card inserted, it will be the top priority for saving data.
-  The camera supports SDHC, SD and MMC card, and the range of usage specification of the card is from 32MB to 4GB.
-  Be sure to orient the card correctly when inserting it. Never try to force a memory card into the slot when you feel resistance.
-  While the camera cannot read the memory card, please clean the metal interface softly with soft cloth and then reload.
-  Never remove a card from the camera while the camera is working. Doing so can cause the file save operation to fail, and even damage the memory card.

## Capture Mode





1. Push the lens' cover and then enter the capture mode;
2. Holding the camera still, point the camera at the subject, gently press **SHUTTER** button and then compose the image.
3. Press **SHUTTER** button. When the image shown on the screen turning left, indicating the image is recorded.
- Press **MENU** button you can select the White Balance、EV Shift、Resolution、Image Quality and so on according to your favourite and then press **SET** button affirm and back to previous. Press **MENU** button again can back to standby mode for capture.
- Before recording, press **W/T** button can zoom in or zoom out.
- Press **▼** button to switch the flash mode: Off、Auto、Red-eye reduction、Compulsion.
- Press **▲** button to select different capture modes such as Single、Continuous and 10sec Self-timer.
- Slide **🌿 •• ▲** button for Macro. then **🌿** icon will appear on the screen, the macro range is 150mm to 250mm.
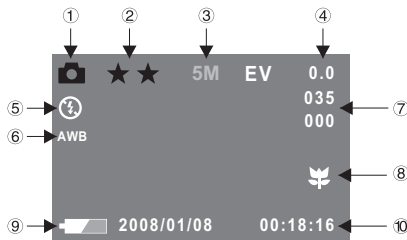
## Monitor Screen



①		Capture mode	⑦	035 000	Counter(Recorded/ Allowance)
②	★★	Image Quality	⑧		Macro
③	5M	Resolution	⑨		Power Capacity
④	0.0	EV Shift	⑩	2008/01/08 00:18:16	Data/Time
⑤		Flash mode			
⑥	AWB	White Balance			

 


## Video mode


1. Press  button to choose AVI icon, and press **SET** button to switch it into video mode.
2. Press **SHUTTER** button to start video recording and timing, you will find the recording symbol (a red dot) appeared on the screen. Press **SHUTTER** button again to stop video recording.
- During the video recording, press ◀▶ button that scenery can be zoom in ( pull ) or zoom out ( push ).
- In current mode, press **MENU** button can select White Balance、EV shift、 Resolution according to the real environment, same as the selection in capture mode.
- Slide  ••  button for Macro, then  icon will appear on the screen, the macro range is 150mm to 250mm.

## Monitor Screen

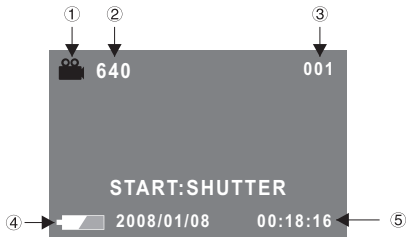

①		Video mode
②	640	Resolution
③	001	Recorded Num.
④		Power Capacity
⑤	2008/01/08 00:18:16	Data/Time

 


## Audio mode


1. Press  button to choose WAV icon, and press **SET** button to switch it into audiomode.
2. Press **SHUTTER** button to start audio recording and timing. Press **SHUTTER** button again to stop audio recording.

## Monitor Screen



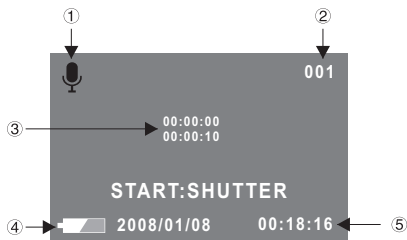


 
 
①		Audio mode
②	001	Recorded Num.
③	00:00:00 00:00:10	Allowance of recording time
④		Power Capacity
⑤	2008/01/08 00:18:16	Data/Time



### SET UP mode

1. Press  button to select " Set up " icon, press **SET** button to switch into Setup mode.
2. In SetUP mode, selections can be done such as Animation 、 Beep、 Frequency、 Default、 Language、 Sleep、 TV-OUT、 Date etc.

### Playback mode

1. Press  button to switch into Playback mode.
2. Press   button to browse the images you want. If the file is movie or voice, press **SET** button to play, press **SET** button again to stop.
  - In Playback mode, press **MENU** button to enter edit menu for different operations.
  - In Playback mode, press   button to choose the image or files, press  button to enter Zoom mode; And press **W/T** button to enlarge or minify the image.
  - In Playback mode, press  button to enter Thumbnail mode and then choose the file you want to play quickly.

### USB mode

In USB mode, the camera can be used as a movable disk by selecting " Mass Storage " Function, or as PC-Camera by selecting " PC-Camera " Function.

## PC-Camera

### Driver Installation

You can check or proofread the version of the hardware and software of the camera.

Instructions how to install Mass storage driver and PC-camera driver.

Please read the following instruction carefully before installing driver program:


1. Please insert the software CD into the CD-ROM before connecting the camera to the computer, ( this CD is attached in the package ) and the install program will run automatically. ( If the CD could not run automatically, please double click Bdvdrun.Exe in the CD root folder )
2. Mass storage and PC-camera driver installation could be finished as the indication shown on the screen.
  - Select the icon of " Install Windows ME/2000/XP Driver " , the installation could be finished as the indication shown on the screen.
  - Turn the camera into the PC-camera mode, connect the camera to the computer with the USB cable attached in the package.
  - The computer could recognize the camera automatically and finish the setting. If the dialog box appears " This installing program is not authorized by Microsoft, Go on or Not? " , click the " go on installing " to finish the installation.
  - If the operation system is windows 98, please pull out the USB cable after the installation and turn the PC mode to Mass storage, then connect it with the USB cable again. The system will identify the camera automatically and also finish the setting. You can use the camera as a moveable Flash Disk.
  - If there is something wrong with the automatic installation, you could also finish the installation manually according to the guide to install the hardware. The corresponding driver program could be found in the drivers/manual folder in the CD root folder. Please read " Readme.txt help file " in this folder.



### Install application software on your computer

 
- ❶ Please insert the CD into the CD-ROM driver and the install program will run automatically.
- ❷ Please click the item of " Install Photo Edit Tool " shown on the installation menu, and it could be finished as the indication shown on the screen. After that, you can edit the beautiful album with your photos.
- ❸ Click the item of " Install Video Edit Tool " shown on the installation menu, and it could be finished as the indication shown on the screen. After that, you can edit the video and produce your own VCD by yourself.
- ❹ Click the item of " Exit " to complete installation.

### Mass Storage

- ❶ Press  button to PC mode and select the item of " Mass Storage " .
- ❷ Connect the camera to the computer with the USB cable.
- ❸ Photos and video files can be found from the path of " computer/movable disk/ DCIM/100COACH " .
- ❹ Photos and video files can be saved on the desk during connecting.

### Connecting with the Printer

The camera can print photos directly by connecting with the printer. First, power on and enter the Playback mode, select a photo to be printed, edit the menu of print function. Next, connect the camera to the printer with the USB cable, and then the printing start.

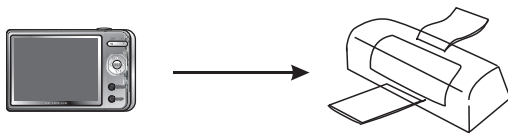 


### Connecting with TV

Users can complete any operation such as browsing images or video files on TV.

#### ☺ **Note:**

- Turn on the camera and TV.
- Connect the camera to the TV with the AV cable.
- In Playback mode, browsing images and video files can be done on TV.
- All functions can be actualized freely on TV.

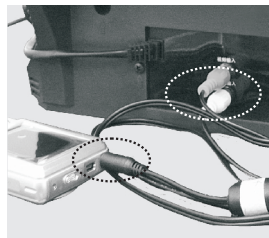

### Camera Specification

LENS	F=6.4mm
SENSOR	5.1Mega Pixels CMOS Sensor
LCD	3.0inch LTPS LCD Display
Aperture	F/2.8
Sensitization	Auto
White Balance selection	Auto, Daylight, Tungsten, Fluoresce, Cloudy
Shutter Speed	1/10second – 1/2650second
Memory	Build-in 32MB Flash Memory SDHC, SD card or MMC card ( Maximum: 4GB )
Resolution	1024x768, 2048x1536, 2592x1944, 3264x2448, 4000x3000
Digital Zoom	1 ~ 8 × Digital Zoom
Normal Distance	1.0m ~ Inf.
Macro	15cm ~ 25cm
Self-timer	10second
Flash Mode	Off/Auto/Compulsion/Red-eye reduction
PC Cam Mode	VGA (640x480) 15 ~ 30FPS CIF(320x240) 15 ~ 30FPS
TV-Out	NTSC/PAL
USB	USB1.1 or Upward
Power	Alkaline/2xAA rechargeable battery/USB5V ( PC Cam mode )
Size	95.0x60.0x23.5mm
Weight	102g ( without battery and SD card )

## System Requirement

Please read the lowness requirement of system for a digital camera as follows before you using the camera. We strongly suggest you using a better computer device for better efficiency. The lowness system requirement as following:

	System requirement
operation system	Microsoft windows 98SE/Me/2000/XP/Vista(32bit)
CPU	Intel Pentium 166MHZ or higher
Memory	More than 32MB
CD-ROM	Fast than 4 times
Disk	More than 10MB free space
Others	USB1.1 or USB2.0

### **Trouble Shooting**

- ❶ The camera could not power on
  - Check if the battery's polarity mistake;
  - Check if the battery capacity is too low.
  
- ❷ The camera turns off automatically
  - Check if the battery goes dead. Please change the battery.
  - The camera is set to turn off automatically in 1min or 2min when no operation performed for 1min or 2min.
  
- ❸ The SD card is loaded, the camera could not capture or record.
  - Check if the SD card is locked.
  - Check if the SD card has enough space to storage.
  
- ❹ Image could not be recorded when the shutter button is pressed.
  - Check if the camera is set to the capture mode.
  - Check if the flash mode is set as Auto, Compulsion or Red-eye reduction; If the flash unit is being charged, please wait until it finished.

## **Trouble Shooting**

- The colour of the photo taken is not normal.  
Please reset the White Balance.  
The image is too bright or too dark. Please reset the EV shift.
- The flash does not fire.  
Check if the flash mode is set as " Auto " 、 " Compulsion " 、 " Red-eye reduction "
- The date displayed is not correct.  
Please reset the date and time in Setup mode.
- Can not print the photos  
Check if the camera is set to Print mode. If not , please reset the camera as Print mode and then connect the camera to the printer with the USB cable.

### VISTA 32/64 System Installation Process

After finished the driver program inside CD, please setting the camera mode to “ PC camera ” then connect to computer by USB line, “ Found New Hardware ” will be displayed on screen.

1. Select “ Locate and install driver software ” , as follow:



2. You will find “ Windows Security ” screen, then select “ Install this driver software anyway ” .

 


3. Driver installation is processing...

 
4. Driver installation have finished.

After finished device driver, if you need to connect different model camera to computer, please uninstall device driver first and then re-install driver program, the detail step is follows:

1. Click “ Computer ” by right mouse button then select “ Properties ” ;
2. Please select & click “ Device Manager ” ;

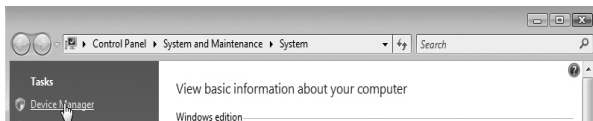

3. Now you need to uninstall driver, select “ imaging devices ” by click right button, then select “uninstall” ;

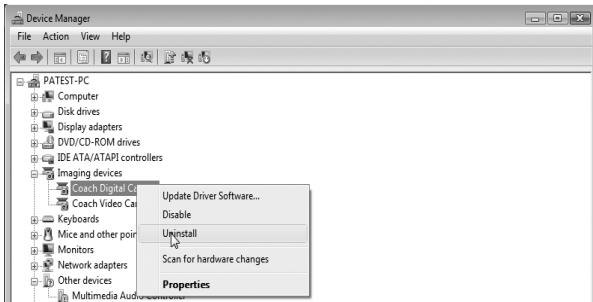



4. Select “ Delete the drive software for this device ” and click “OK” ;



5. After finished uninstall, click menu “Action ” then select “ Scan for hardware changes ” to re-install driver;



6. You will find “ Found New Hardware ” window ;

7. Select “ Locate and install driversoftware ” ;

8. You will find “Windows Security ” screen, then select “Install this driver software anyway ” ;

9. The driver is installing...

10.Driver installation have finished .